



PROTECTO DOOR FLASHING INSTALL KIT™



**EVERYTHING NEEDED
FOR AN EASY AND
WATERTIGHT
DOOR INSTALL**

KIT INCLUDES:

- SUPER STICK BUILDING TAPE® - 4" x 25' ROLL
- DUAL GUARD THRESHOLD TAPE™ - 5.5" x 4' Roll
- PROTECTO SEALANT 25XL - 1 TUBE
- PROTECTO WRAP MEMBRANE SMOOTHER TOOL
- INSTALLATION INSTRUCTIONS
- PROTECTO WRAP SLIM PEN CUTTER UTILITY KNIFE

**THE ULTIMATE PROTECTION FROM AIR AND MOISTURE
INFILTRATION UNDER THE THRESHOLD**



PROTECTO WRAP COMPANY
1955 S. Cherokee St. Denver, CO 80223
(800) 759-9727 | www.ProtectoWrap.com



PROTECTO DOOR FLASHING INSTALL KIT™ INSTRUCTIONS FOR USE

WHAT'S INCLUDED IN YOUR KIT:

- ▶ Super Stick Building Tape® (4" x 25')
- ▶ Dual Guard Threshold Tape™ (5.5" x 4')
- ▶ 1 Tube of Protecto Sealant 25XL
- ▶ 1 Protecto Wrap Membrane Smoother Tool
- ▶ 1 Protecto Wrap Slim Pen Cutter Utility Knife

! BEFORE YOU START


- Make sure surfaces are clean, dry, and free of dirt, dust, oil, or loose material.
- A clean surface ensures proper adhesion of all products.
- You will need a caulking gun, tape measure and gloves.
- Ideal application temperature: 40°F - 100°F (4°C - 38°C).

USE THE CHART TO DETERMINE SUPER STICK BUILDING TAPE LENGTHS


| Flashing Location: | Flashing Lengths and Cut Formulas |
|--------------------|---|
| Sill Flashing: | Rough opening width + (2X flashing width) |
| Jamb Flashing: | Rough opening height + (2X flashing width) - 1 inch |
| Head Flashing: | Rough opening width + (2X flashing width) + 2 inch |



- 1** Cut a piece of Dual Guard Threshold Tape the width of the door opening and add 6" . 3" will extend up each side of the door jamb. Peel off the release liner and apply the tape to the door sill plate by smoothing down the tape as the adhesive comes in contact with the door sill.

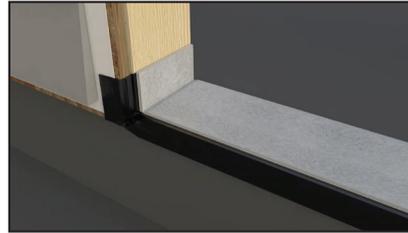

- 2** Make sure to press the tape into the joints where the door jamb meets the door sill. Once the tape is secured to the door sill and door jamb, stretch the flange over the exterior sheathing to create a water tight gasket.

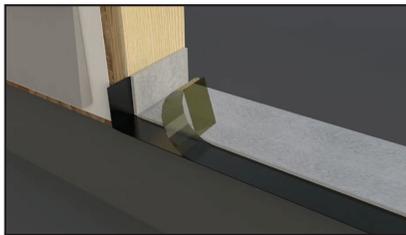


- 3** The protective film covering the flange can be removed.



- 4** Install door directly on top of Dual Guard Threshold Tape.

- 5** Use Super Stick Building Tape to flash the door rough opening or nailing fin depending on which installation method you're using. Apply in a water shedding fashion and firmly roll into place using the included red smoother tool to smooth out any wrinkles, air bubbles or creases.

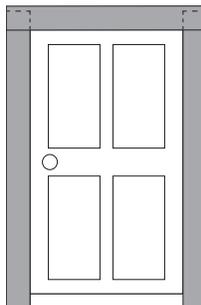

- 6** Protecto Sealant 25XL cartridges are easy to apply with conventional hand-caulking equipment. Apply a continuous 3/8" diameter sealant bead along the back of the nailing flanges along the prepunched fastener holes and immediately set the door per manufacturers instructions. Allow Protecto Sealant 25XL to cure for 24 hours prior to covering with Protecto Wrap window and door sealing tape.

